

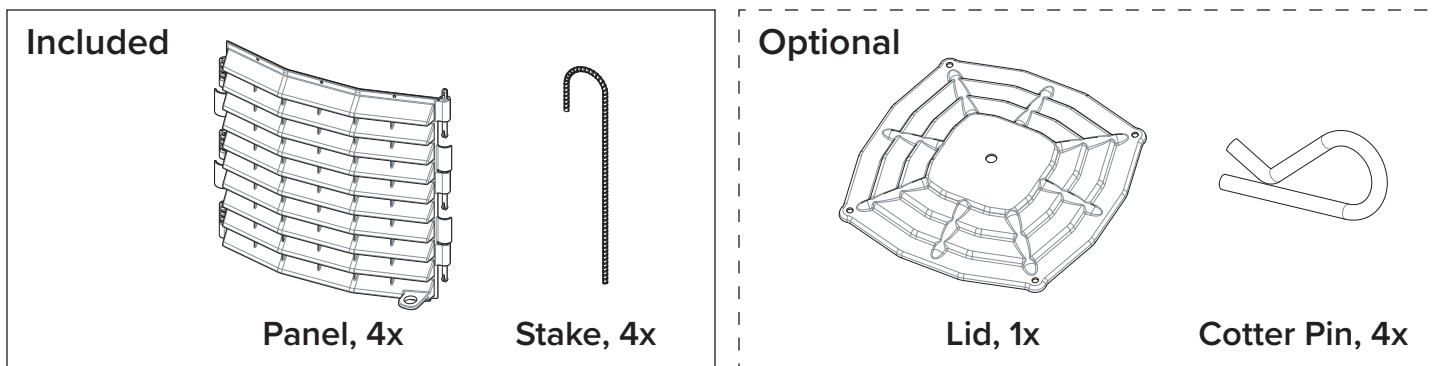
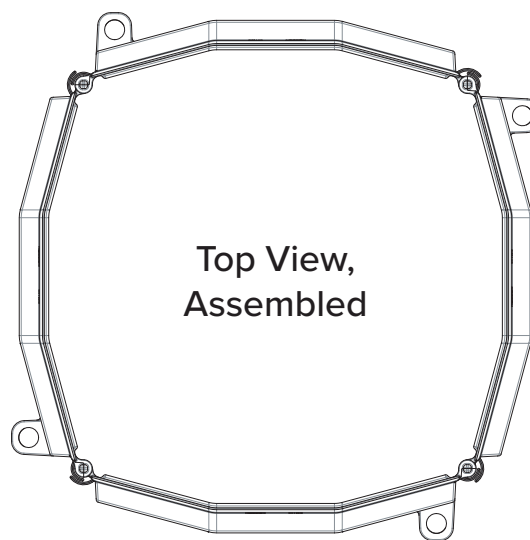
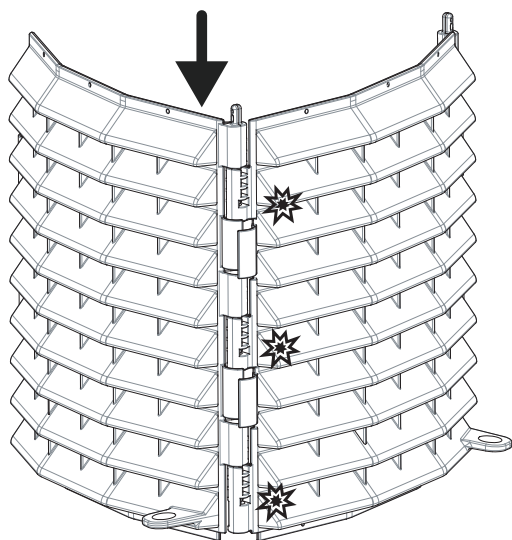


# QUICK DRAIN UNIVERSAL INTAKE

## ASSEMBLY INSTRUCTIONS: 4-SIDED

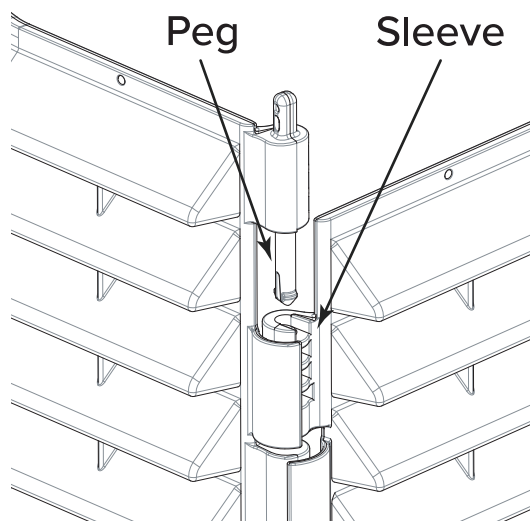



- 1** Align 3 pegs from one Panel with the 3 sleeves on another Panel. Firmly press down on the Panel to snap all 3 pins into place. Repeat for all 4 Panels.

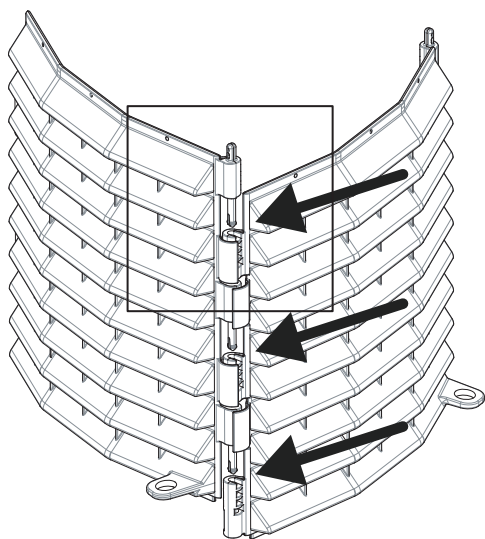

# QUICK DRAIN UNIVERSAL INTAKE

## ASSEMBLY INSTRUCTIONS: 4-SIDED

- 2** Install the stake, inserting the long end of the stake through the integrated stake loop. Drive the stake into the ground until the Quick Drain Universal Intake is secured to the ground. Don't over-set the stake to avoid damaging the stake loop.

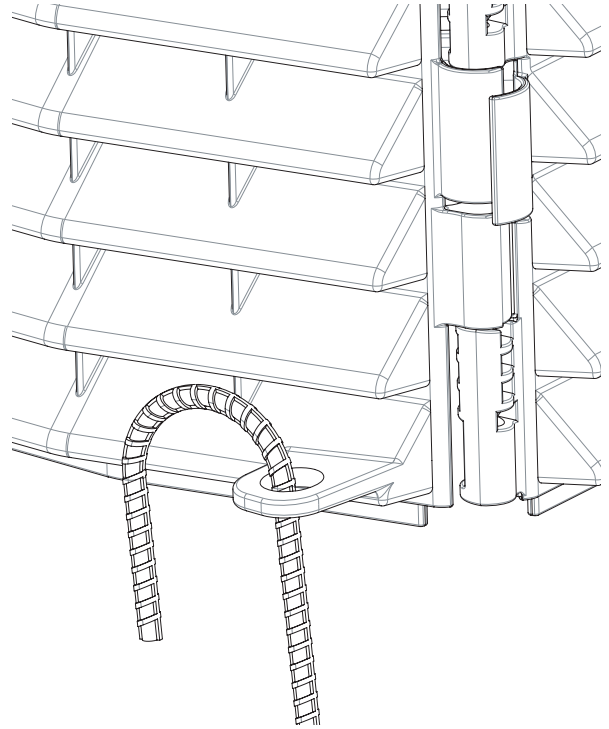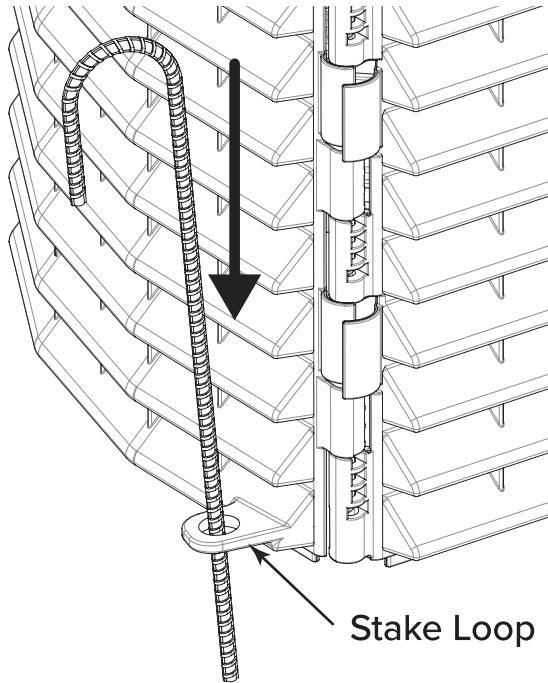

- 3** If purchased with a Lid, align the lid pins on the top of the Panels with the holes in the Lid and press into place. Use the included Cotter Pins to secure the Lid in Place.

